



UK MKIII Supra Owners Group

Removing the Coil Pack



Author	J Seaman
Date	29/08/07
Version	1.00
Edited by	NA

Disclaimer

Neither the author nor the MKIII Supra Owners Group accepts liability, including liability for negligence, in respect of any statement in this guide.

The guide reflects the opinions of the author following his own experience, and does not state any of the opinions as pure factual information, and accepts no liability for the interpretation of the report by the reader. Neither the author nor the MKIII Supra Owners Group accepts liability for the distribution of this guide, or for the actions that may occur following the guides distribution.

The guide may not be distributed without the express permission of the author

Step 1 - Follow the guide to remove the 3000 pipe

Step 2 - Undo the four 10mm nuts that hold the coil pack in place

Step 3 - There is a black wire that runs from a screw on the coil pack to a bolt which provides a ground connection. It is easier to access the bolt than the screw so remove this (12mm)



Step 4 - In case you get any problems here is the coil pack order (Firing order is 153624 coil order is 163425), this series of pictures shows me pointing to the HT lead for each cylinder, so picture 1 is cylinder 1 etc Remove all the HT leads from the coil pack













Step 5 - Remove the connector to the coil pack



Step 6 - The coil pack should now be free to remove from the car. Lift it up over the mounting screws and it should come away cleanly



Just to ensure this is clear, when refitting the leads the COIL PACK order is the one you follow. The firing order is there just for your information so you use 1-5-3-6-2-4